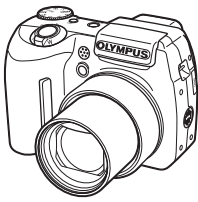**OLYMPUS®**

Quick Start Guide SP-500 UZ

Start Here

For more information, please refer to the Basic & Advanced Manuals or visit: www.olympusamerica.com/support

OLYMPUS IMAGING AMERICA INC.

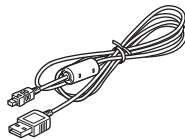## BEFORE YOU BEGIN

Gather these items (box contents)

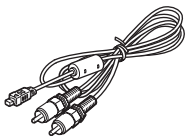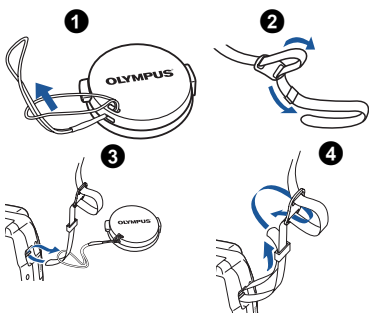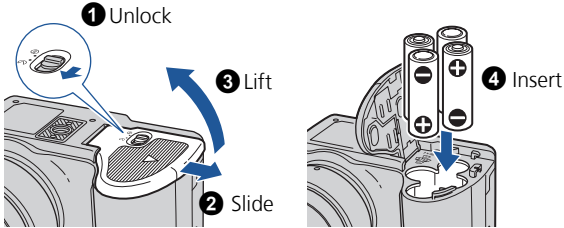| Digital Camera | Lens Cap/ Lens Cap String | Strap | AA (R6) Alkaline Batteries (four) | USB Cable | AV Cable | OLYMPUS Master Software CD-ROM |

Items not shown: Advanced Manual (CD-ROM), Basic Manual, warranty card. Contents may vary depending on purchase location.

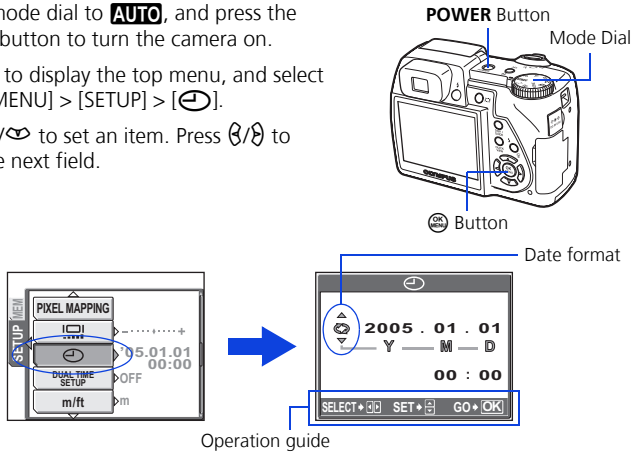## 1 GET STARTED

a. Attach the strap and lens cap

❶ ❷ ❸ ❹

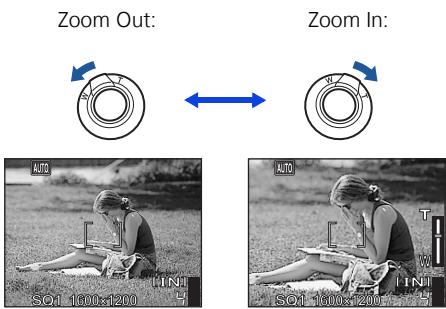### b. Insert the batteries

❶ Unlock
❷ Slide
❸ Lift
❹ Insert

c. Set the date and time

❶ Set the mode dial to **AUTO**, and press the **POWER** button to turn the camera on.
❷ Press 🔘 to display the top menu, and select [MODE MENU] > [SETUP] > [⊕].
❸ Press ▲/▼ to set an item. Press ◀/▶ to select the next field.

POWER Button — Mode Dial
🔘 Button

PIXEL MAPPING
🖵
⊕ 05.01.01 00:00
DUAL-TIME SETUP OFF
m/ft ▸m

2005 . 01 . 01
Y — M — D
00 : 00

Date format
Operation guide
SELECT◆▦ SET▸▦ GO◆OK

2 TAKE A PICTURE

a. Zoom

Zoom Out: Zoom In:

b. Focus

❶ Using the monitor, place the AF target mark over your subject.

Green Lamp

AF Target Mark

(Pressed Halfway)
Shutter Button

❷ Press and hold the shutter button halfway to lock the focus.
● The green lamp indicates the focus and exposure are locked.

c. Take the picture

❶ Press the shutter button completely to take the picture.

(Pressed Completely)
Shutter Button

CAMERA DIAGRAM

Strap Eyelet
DC-IN Jack
Shutter Button
Microphone Flash
Multi-Connector
Strap Eyelet

Card Cover
Card Slot
Self-Timer Lamp/ AF Illuminator
Lens
Speaker Connector Cover

Zoom Lever
POWER Button
Mode Dial
AEL Button/ Custom Button
🖶 Button (Print)
Viewfinder
⚡ Button (Flash pop-up)
DISP./GUIDE Button
QUICK VIEW Button
🔘 Button (OK/MENU)
Monitor
|O| Button (Monitor/Viewfinder)
⚡ Button (Flash Mode)
🗑 Button (Erase)
Card Access Lamp
Arrow Pad (▲/▼/◀/▶)
Battery Compartment Lock
Battery Compartment Cover
Tripod Socket

3 REVIEW OR ERASE A PICTURE

a. Press the QUICK VIEW button

● The last picture taken will be displayed.

Zoom Lever
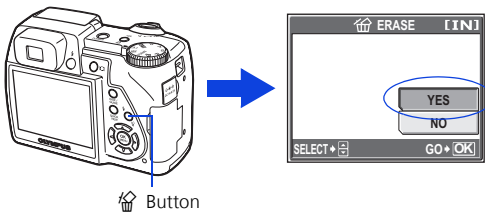**QUICK VIEW** Button
Previous Picture
Next Picture
Arrow Pad
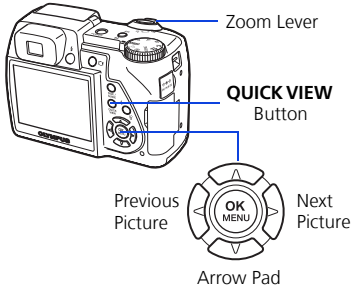
b. Take a closer look

● Pull the zoom lever toward T or W to zoom in or out.
● Press 🔘 to return to the original size.
● Press the arrow pad (▲/▼/◀/▶) to scroll around.

Press the **QUICK VIEW** button again to return to shooting mode.

c. To erase a picture

🗑 Button

🗑 ERASE 〔IN〕
YES
NO
SELECT◆▦ GO◆OK

❶ Display the picture you want to erase.
❷ Press the 🗑 button.
❸ Select [YES], and press 🔘.
● The picture is permanently erased.
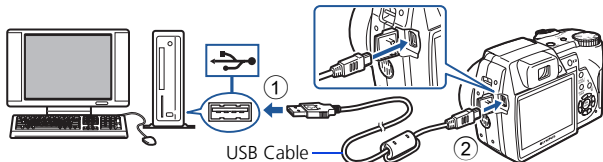
4 TRANSFER IMAGES

a. Install the software

❶ Insert the OLYMPUS Master CD-ROM.
❷ **Windows:** Click the "OLYMPUS Master" button.
Macintosh: Double-click the "Installer" icon.
❸ Simply follow the on-screen instructions.
● Remember to register your camera when you install OLYMPUS Master or visit: www.olympusamerica.com/prodreg
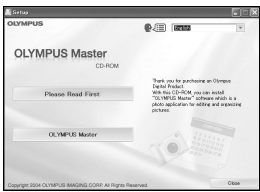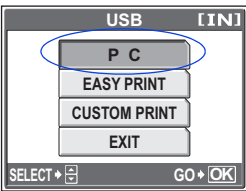
b. Connect the camera to the computer

❶ Connect the camera and computer using the USB cable (included).
● The monitor will turn on automatically.

①
USB Cable
②

❷ Select [PC] on the monitor, and press 🔘.

USB 〔IN〕
P C
EASY PRINT
CUSTOM PRINT
EXIT
SELECT◆▦ GO◆OK

● Your PC will now recognize your camera as a removable storage drive.

c. Transfer images to the computer

❶ With the camera now connected, open OLYMPUS Master.
● The [Transfer Images] window is displayed.
❷ Select the images you want to transfer, and click the [Transfer Images] button.
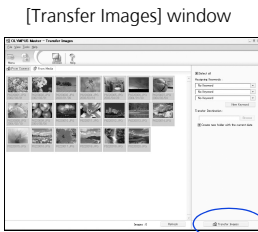
If the [Transfer Images] window is not displayed automatically:

a. Click the "Transfer Images" icon on the OLYMPUS Master main menu.
b. Click the "From Camera" icon.

[Transfer Images] window
[Transfer Images] button